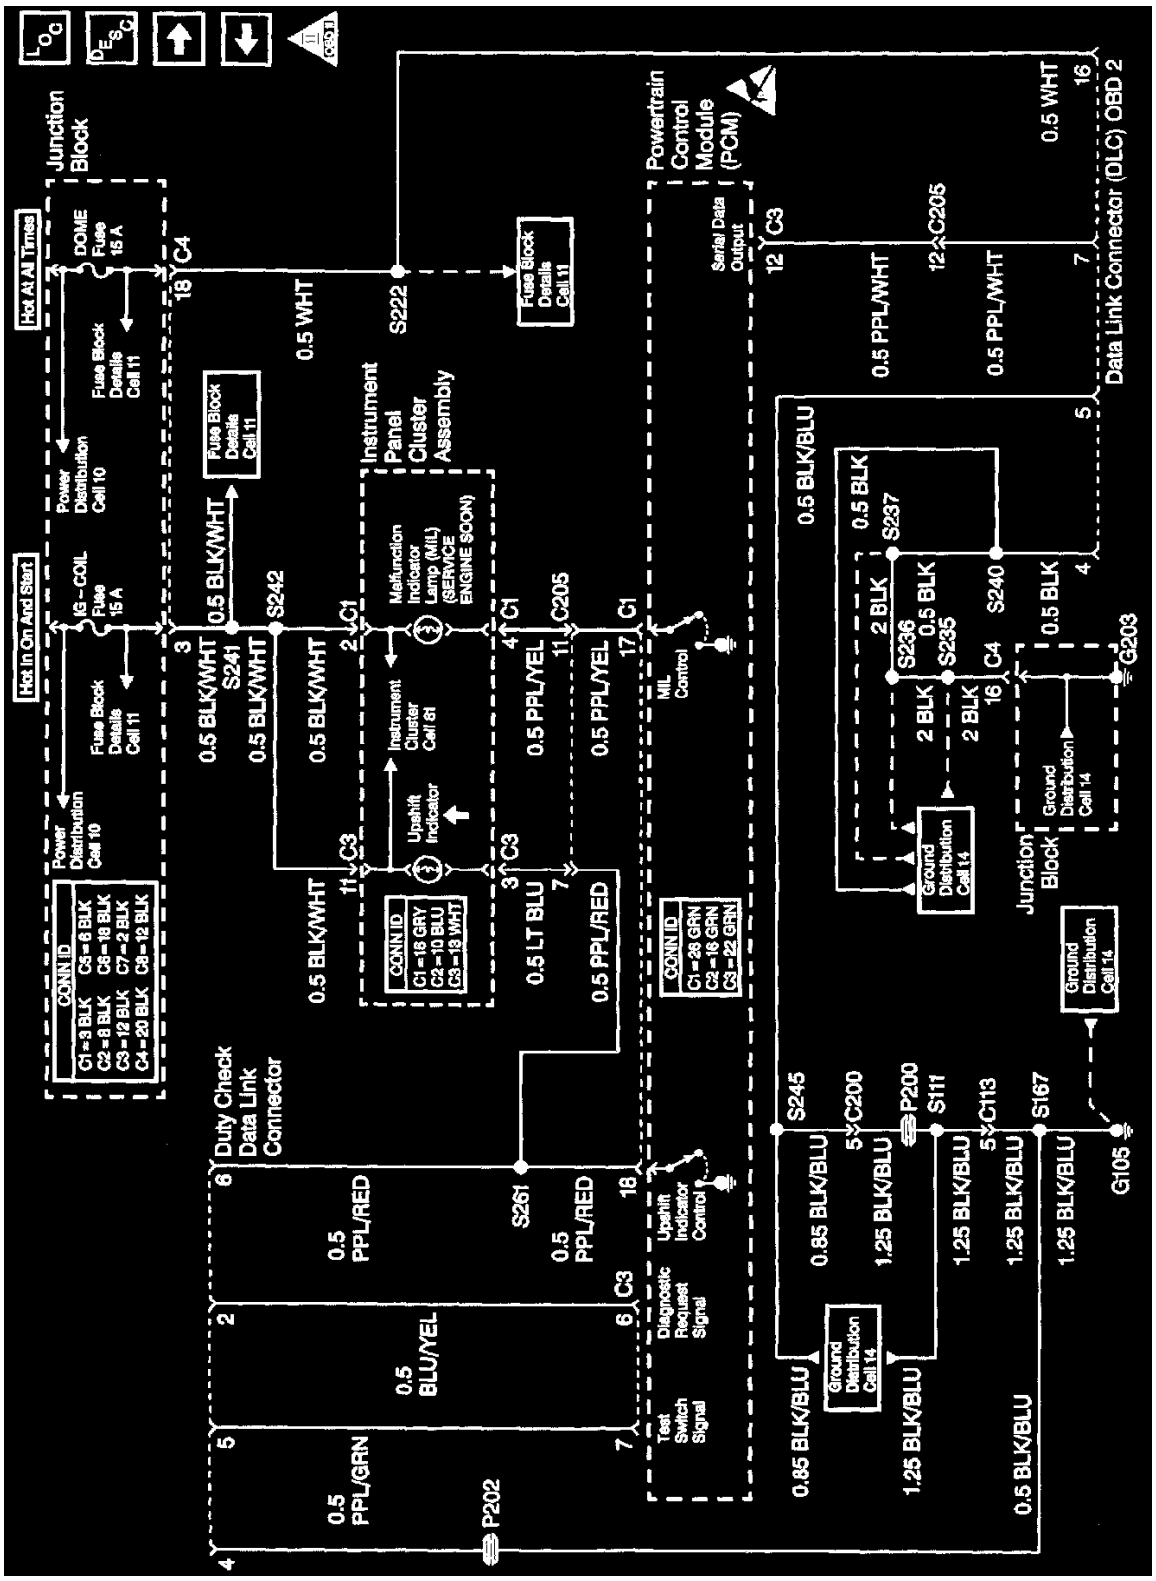
Junction Block
Hot At All Times
Hot In On And Start
DOME Fuse 15 A
IG - COIL Fuse 15 A
Power Distribution Cell 10
Fuse Block Details Cell 11
CONN ID
C1 = 3 BLK
C2 = 8 BLK
C3 = 12 BLK
C4 = 20 BLK
C5 = 6 BLK
C6 = 18 BLK
C7 = 2 BLK
C8 = 12 BLK
Instrument Panel Cluster Assembly
Malfunction Indicator Lamp (MIL) (SERVICE ENGINE SOON)
Instrument Cluster Cell 81
Upshift Indicator
CONN ID
C1 = 16 GRY
C2 = 10 BLU
C3 = 13 WHT
Powertrain Control Module (PCM)
Serial Data Output
MIL Control
CONN ID
C1 = 26 GRN
C2 = 16 GRN
C3 = 22 GRN
Duty Check Data Link Connector
Upshift Indicator Control
Diagnostic Request Signal
Test Switch Signal
Data Link Connector (DLC) OBD 2
Ground Distribution Cell 14
Junction Block
0.5 WHT
0.5 BLK/WHT
0.5 PPL/YEL
0.5 LT BLU
0.5 PPL/RED
0.5 PPL/GRN
0.5 BLU/YEL
0.5 BLK/BLU
0.85 BLK/BLU
1.25 BLK/BLU
0.5 BLK
2 BLK
S222
S241
S242
S261
S237
S236
S235
S240
S245
S111
S167
C1
C3
C4
C205
C200
C113
P200
P202
G203
G105