


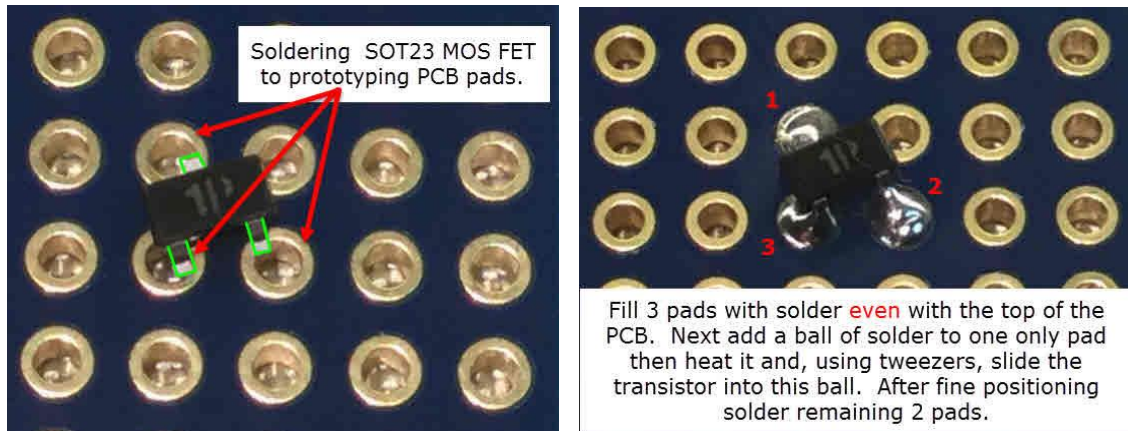
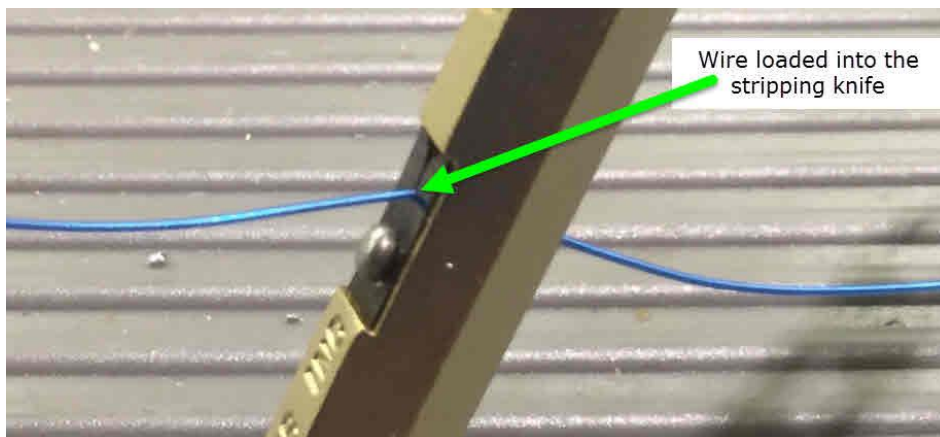
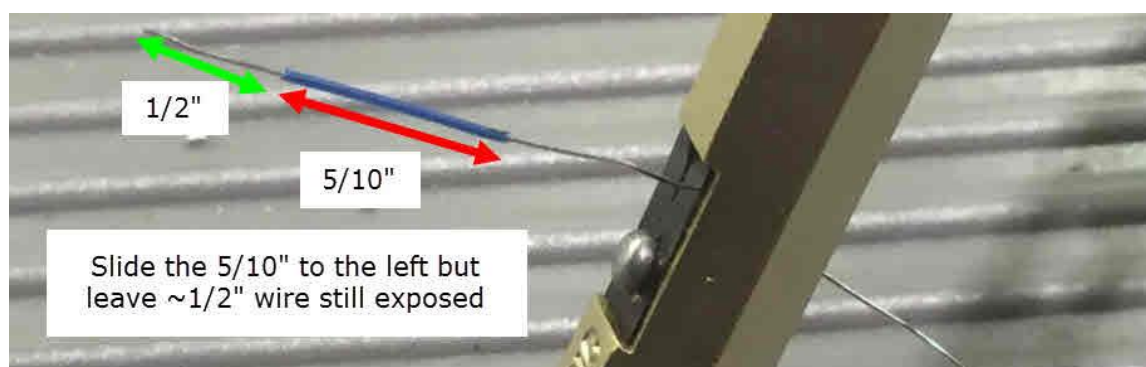
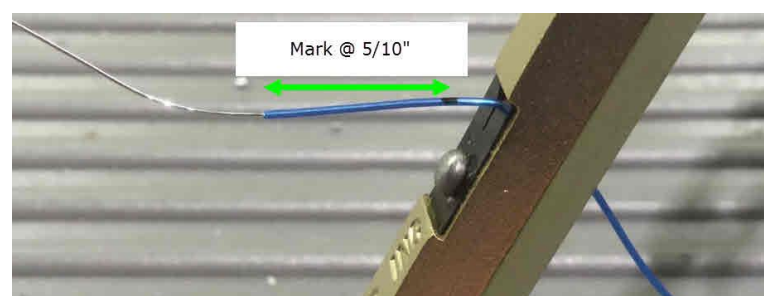


# Point to Point Breadboard Wiring





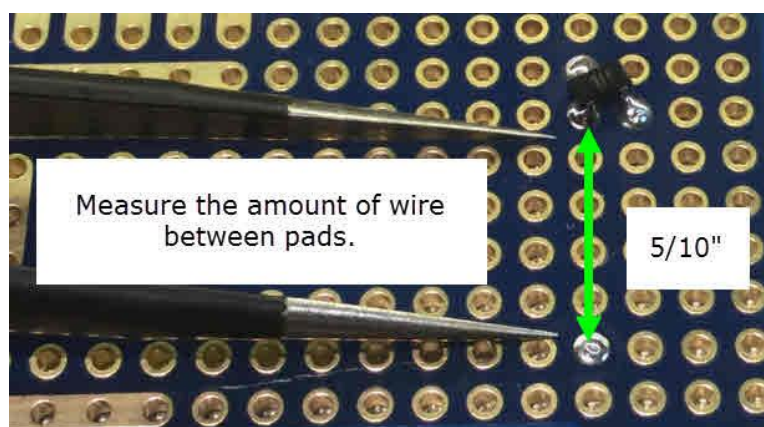


Use 'wire wrapping' 30 AWG wire to make interconnections. Stripping tools seen below.





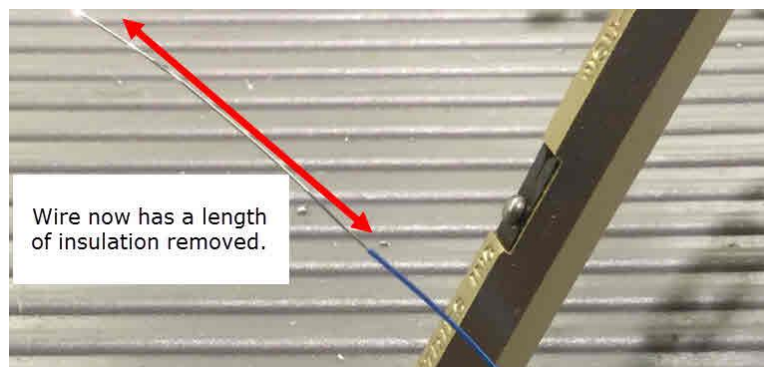


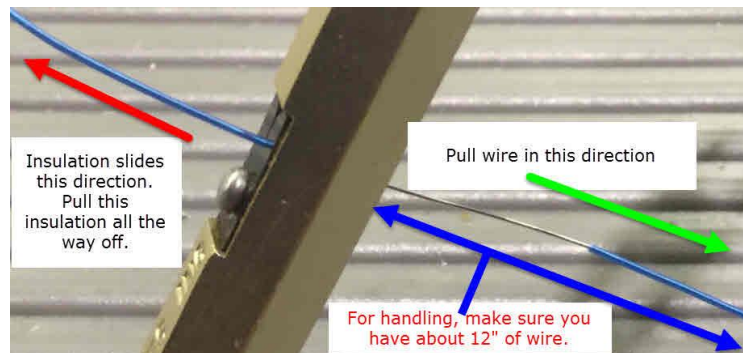



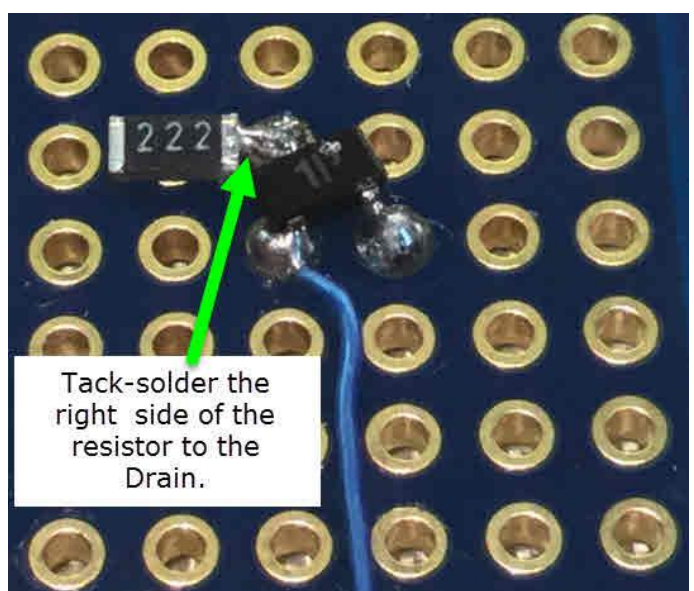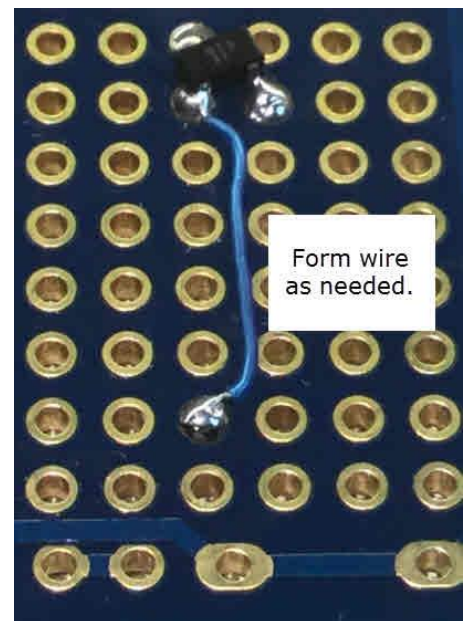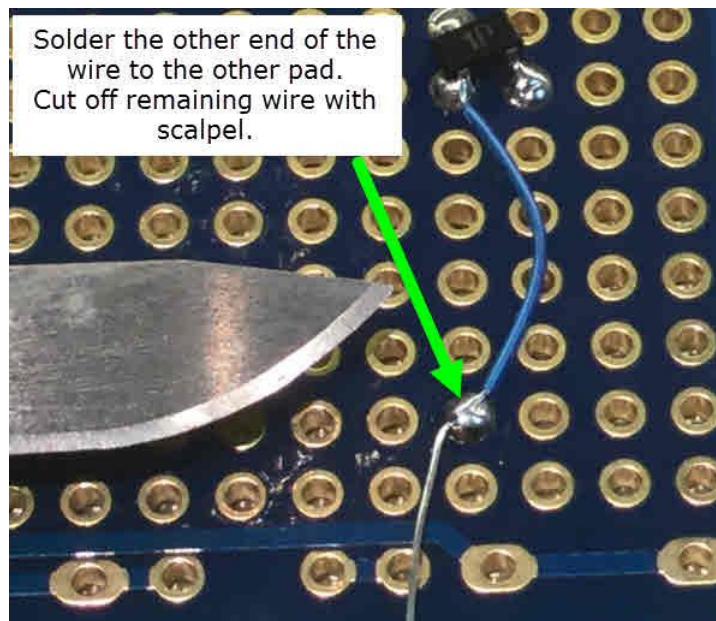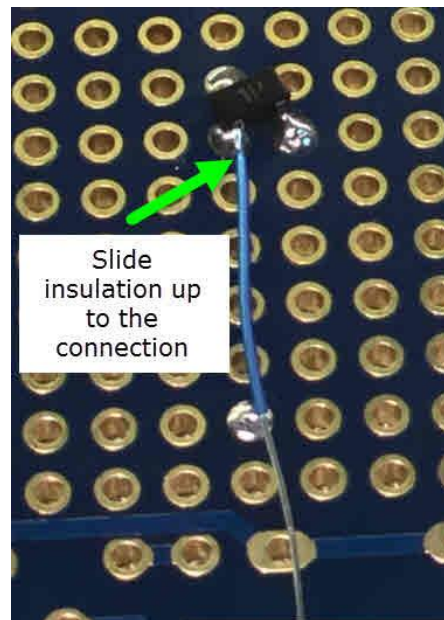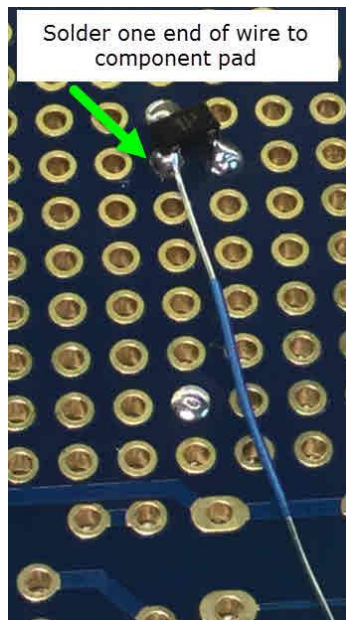




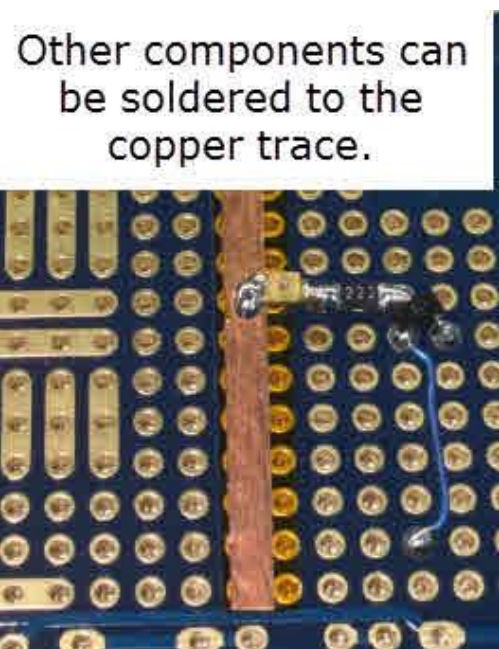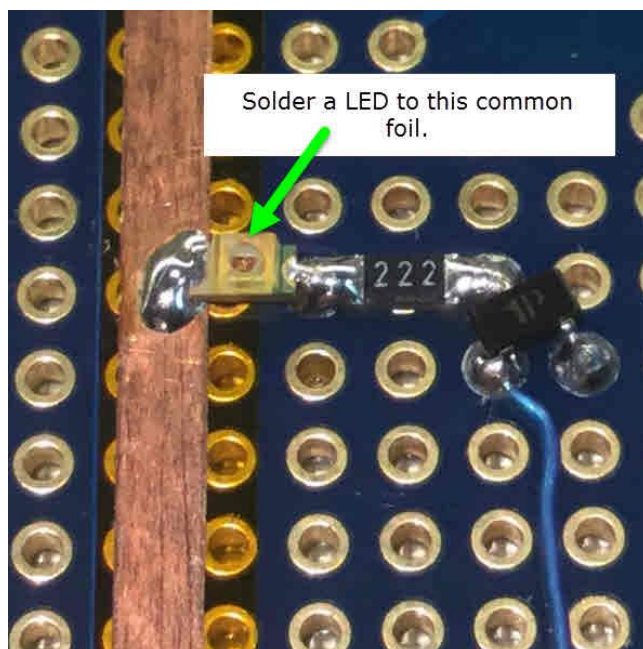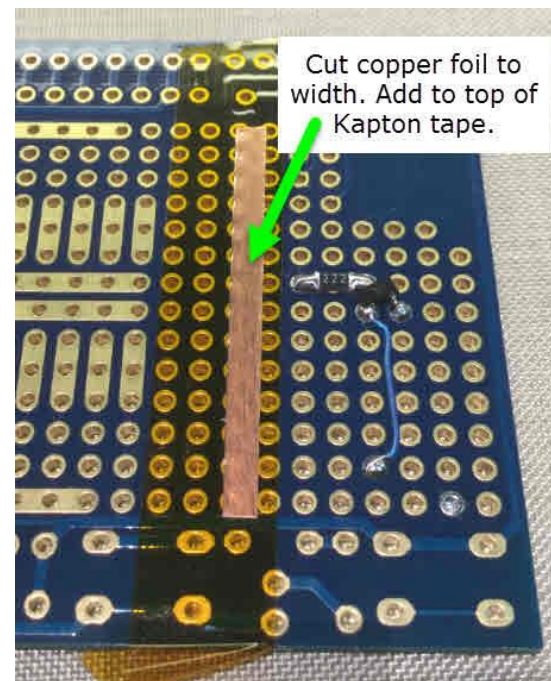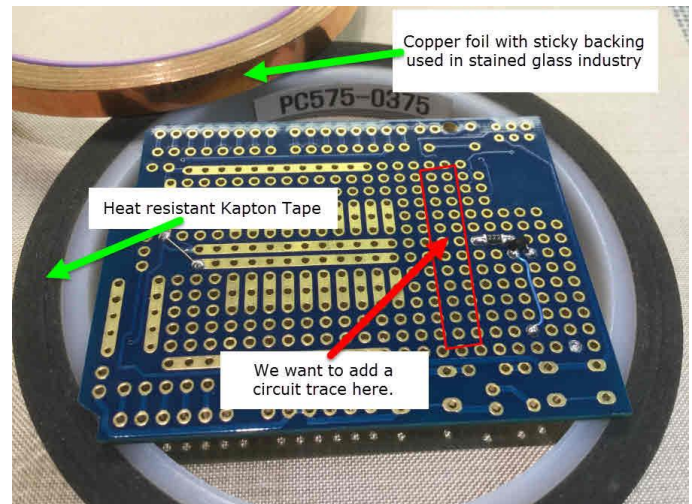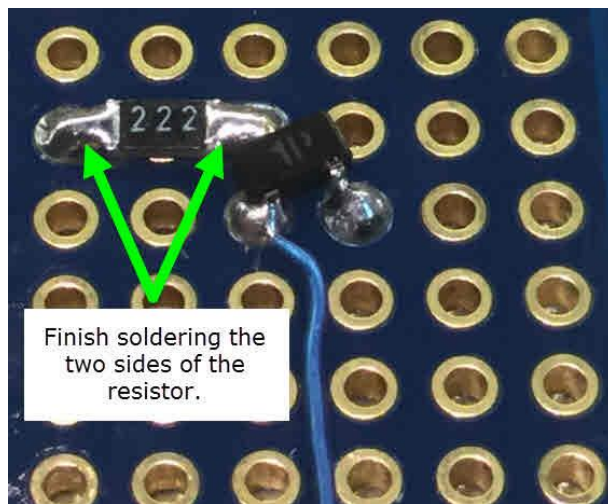

## Daisy chaining wire connections.

If a wire goes from one pad to another, make several sections of movable insulation before soldering.

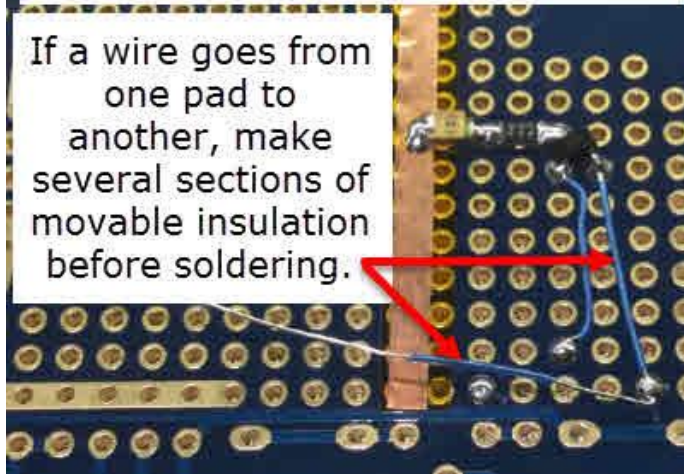

Finished Point to Point wiring guide.

