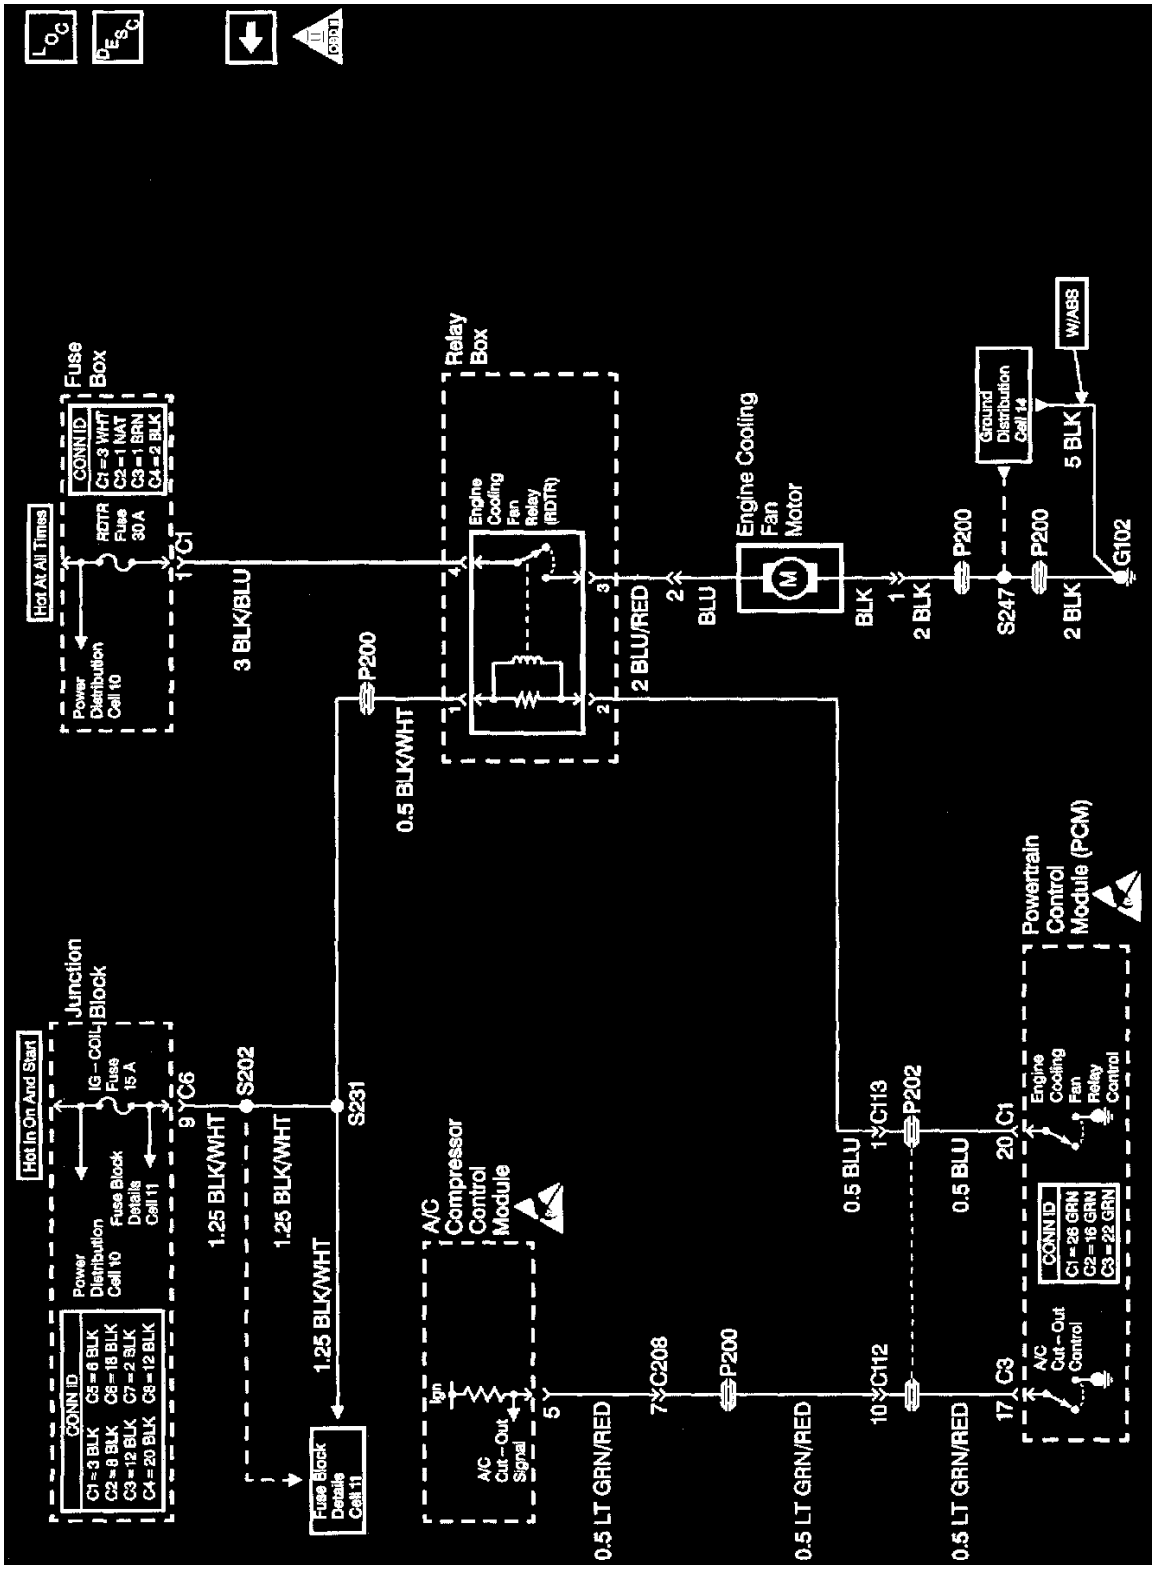
Hot At All Times
Power Distribution Cell 10
RDTR Fuse 30 A
CONN ID
C1 = 3 WHT
C2 = 1 NAT
C3 = 1 BRN
C4 = 2 BLK
Fuse Box
C1
3 BLK/BLU
P200
0.5 BLK/WHT
Relay Box
Engine Cooling Fan Relay (RDTR)
2 BLU/RED
BLU
Engine Cooling Fan Motor
BLK
2 BLK
S247
Ground Distribution Cell 14
W/ABS
5 BLK
G102
Hot In On And Start
Junction Block
IG-COIL Fuse 15 A
Fuse Block Details Cell 11
CONN ID
C1 = 3 BLK C5 = 6 BLK
C2 = 8 BLK C6 = 18 BLK
C3 = 12 BLK C7 = 2 BLK
C4 = 20 BLK C8 = 12 BLK
C6
S202
1.25 BLK/WHT
S231
Fuse Block Details Cell 11
A/C Compressor Control Module
Ign
A/C Cut-Out Signal
0.5 LT GRN/RED
C208
C112
C113
P202
0.5 BLU
C1
C3
Powertrain Control Module (PCM)
Engine Cooling Fan Relay Control
A/C Cut-Out Control
CONN ID
C1 = 28 GRN
C2 = 16 GRN
C3 = 22 GRN